

COPLAND

CVA306



USER GUIDE

Introduction

We would like to take this opportunity to thank you for selecting the CVA306 Valve Pre-amplifier.

We at Copland wish you many enjoyable hours in the company of fine music.

Please read this owners manual before operating the equipment.

CAUTION!

Various regulation agencies require us to bring the following information to your attention. Please read carefully.

WARNING ! To prevent fire or shock hazard, do not expose this unit to rain or moisture.

! Check that your supply voltage is the same as indicated

! Dangerous voltage inside. Do not open the cabinet. There are no user serviceable parts inside. Repairs should be carried out by qualified service personnel only.

! Ensure that no objects or fluids pass through the ventilation openings. If liquid is spilt into the amplifier, disconnect from the mains and consult a qualified service technician.

Installation

Open the carton and remove the amplifier from its plastic bag. The AC-power cord is placed in the bottom of the carton. Before placing the unit in your home read this carefully.

Do not subject the amplifier to high mechanical vibration, the Valves are sensitive to this.

The trouble free life of an electronic instrument is greatly extended by providing sufficient ventilation to prevent the build up of high internal temperatures that cause deterioration. Allow enough clearance so that cool air can enter at the top. With adequate ventilation the amplifier can be mounted in any position.

The recommended minimum space is 45 cm deep, 45 cm wide and 30 cm high.


Input / Outputs

Use shielded cables to connect the input and outputs to signal sources and power amplifiers. To minimise the possibility to hum the shielded cables should run parallel to each other or loosely twisted together. Locate the cables away from speaker leads and AC power cords. All connections is made on the back panel of the amplifier.

AC Power

The amplifier AC power cord is plugged into a 110/120/220/240 volt 50/60 Hz wall outlet. The right voltage is indicated on the back panel under the jack.

Front Panel

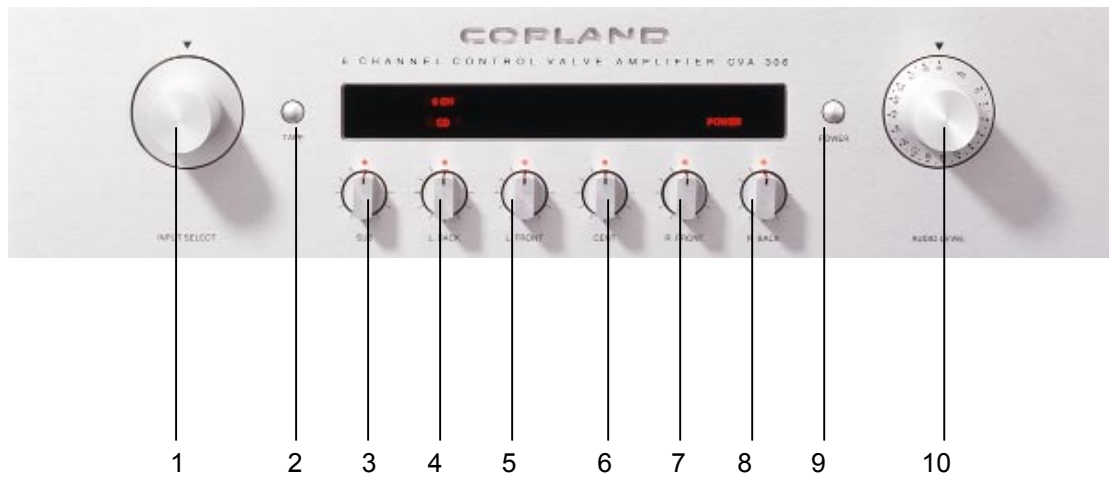

1. Source Selector : Selects the appropriate input signal source.

2. Tape Monitor : If you have connected a tape recorder or a cassette deck to the “tape in” on the back of the unit, then switching Tape will make it possible to listen to tapes. If your tape recorder has a monitor capability (usually requires a separate playback head), then you can monitor your tape recording as it is being recorded by switching the tape button.


NOTE : When the Tape monitor is engaged it bypasses the Selector Switch. Regardless of which source the selector is set for, you only hear the tape if the Tape Monitor is accidentally left on, none of the inputs on the Source Selector will operate.

3. 4. 5. 6. 7. 8 : Channel Level : Permits adjustment of level between all channels. Rotating clockwise will increase relative level.

9 : Power switch : Turns amplifier on. **Power** on or **Stand By** is indicated in the display.

10 : Audio Level : To adjust the volume to the desired listening level. Turn the control clockwise to increase the volume.

Back Panel

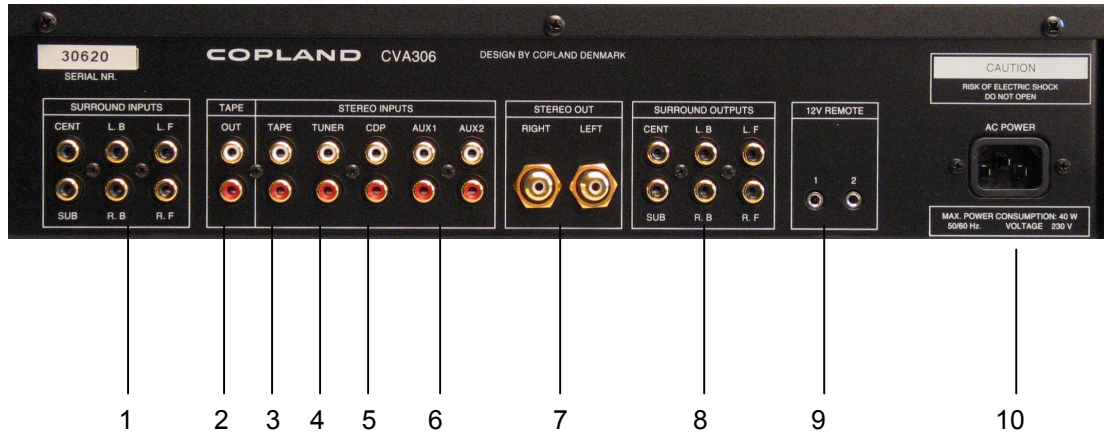

1 : Surround Inputs : Accepts Six-Channel analog inputs from a DVD or SACD player.

2 : Tape out : The record output jack permits recording directly any signal being Reproduced by the amplifier.

3 : Tape in : Connect with the playback outputs of the tape recorder or cassette deck.

4 : Tuner : Accepts the signal from a tuner.

5 : CDP : Input for a CD player.

6 : AUX 1 & 2 : Input for any high output device.

7 : Stereo out : Outputs to stereo power amplifier.

8 : Surround outputs : Outputs to 5 channel power amplifier and active subwoofer.

9 : 12V remote 1 & 2 : DC jack for remote on/off operation of power amplifier and CD-Player / DVD-Player.

10 : AC Power : The AC Power Cord is plugged here.

Maintenance

The amplifier is build for a long lifetime, and no special care needs to be taken apart From what is already described under installation. However the heart of the amplifier Is the Valves / Tubes and like a light bulb, they have a limited lifetime and can therefore after a period affect the performance of the amplifier. You should therefore after 4000 playing hours, or if the amplifier changes sound, contact your service agent for replacement of valves.

Warranty and Service

Copland provides a warranty to the first purchaser for a period of one year that the amplifier will work perfectly. Copland usually commissions the Copland agency in the country in which the amplifier was purchased to carry out any warranty work. Following consent from Copland in a particular case, the warranty service may also be claimed at an agency in another country.

Specifications

Vacuum tubes	12AX7 / ECC83 (6)
Output voltage	Rated 2V. max.15V
T.H.D.	Less than 0,1% (output 1V)
Input sensitivity	300mV (output 1V)
Input impedance	25 K ohms
Output impedance	Less than 600 ohms
S/N ratio (IHF-A curve)	More than 90 dB
Power consumption	40W
Nominal mains voltage	115V or 230V factory set for destination country only
Mains voltage range	+/- 12%
Dimensions	430(W) 110(H) 390(D)
Shipping weight	10 Kg